



WB-LINK

AnchorLink Beltpack Transmitter

Contains Transmitter Module FCC: Y82-SC14S / IC: 9578A-SC14S

The WB-LINK is a wireless Beltpack transmitter with a 3.5 mm connector jack Mic/Line input. It operates on the DECT 1.9 GHz frequency. The WB-LINK is powered by two AA batteries and operates approximately 6 - 8 hours with fresh batteries. Use the Beltpack with the AnchorLink series HBM-LINK, LM-LINK, EM-LINK and CM-LINK.

Specifications:

Operating Voltage: 3V DC (2 AA Alkaline Batteries)


Mic Bias Voltage: 2V DC

Frequency Range: 1880-1900 MHz

Modulation: DECT GFSK

Antenna: Embedded

Dimensions (HWD): 4" x 2.7" x 1"

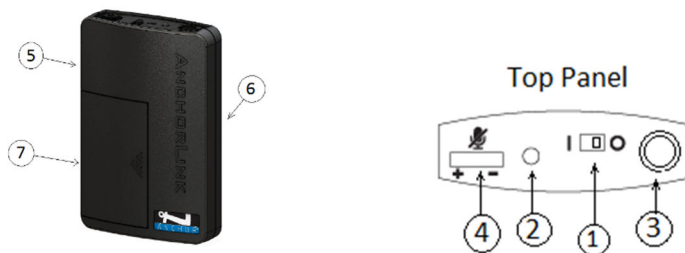


1. On/Off Switch: Turns transmitter power on and off.
2. Pairing LED: Solid GREEN LED indicates paired. Red LED will flash when battery is low.
3. Connector Jack: 1/8" (3.5mm) Stereo Locking.
4. Volume/Mute Wheel Switch: The rotary control adjusts the transmitter's audio level. Also serves as a MUTE when push down.
5. Mic/Line Selector: The switch sets the audio input either to Microphone level or Line level
6. Belt Clip: Black Spring Wire
7. Battery Compartment: Insert two AA dry or rechargeable batteries into the compartment making sure the polarity of the batteries is correct.



WB-LINK pin-out

Mic/Line Plug

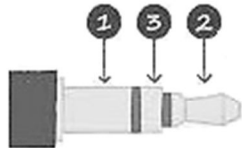

3.5mm Jack



Mic Capsule

